

ATMOSRX

DRY HERBS ATTACHMENT



USER MANUAL



SAFETY & DISCLAIMERS...

Read the following safety recommendations before using the AtmosRx[®] vaporizer. Please keep this user manual in a safe place for future reference. Do not allow children, women who are pregnant or breast feeding and those with life threatening illnesses to use this device. The manufacturer is not responsible for any damage or personal injury caused by inappropriate, incorrect, or irresponsible use of the device. AtmosRx[®] is not a medical device and is not intended to diagnose, cure, treat or prevent any diseases or other conditions. If you have any health problems, consult your doctor before using the AtmosRx[®] vaporizer. The AtmosRx[®] device is not intended to administer medicinal or illegal products of any kind, doing so voids the warranty. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the law of your jurisdiction.

TABLE OF CONTENTS...

1. Introduction
2. General Function
3. Starter Kit Contents
4. AtmosRx® Overview
5. Accessories Overview
6. Preparing
7. Activating Without Glass / With Glass

TABLE OF CONTENTS...

8. Charging
9. Cleaning & Maintaining Heating Chamber
10. Cleaning & Maintaining Ceramic & Mesh Filters
11. Removal of Spring and Filter
12. Placing of Spring and Filter
13. Tips
14. Warnings
15. Commonly Used Herbs
16. Warranty

INTRODUCTION...

Atmos Nation is proud to present to you a new generation of vaporizers...

AtmosRx®.

We invite you to step into the many layers of our atmosphere with the new AtmosRx®, the world's smallest portable vaporizer.

Utilizing the most advanced technology available, Atmos Nation has developed the ultimate herb vaporizer. No need for butane or a lighter with the AtmosRx® advanced vaping system.

Simply fill your AtmosRx® vaporizer and you are ready to vape in style.


GENERAL FUNCTION...

Congratulations on purchasing the smallest and greatest portable vaporizer that this generation has ever seen! Created utilizing advanced technology and expertise, AtmosRx® is a vaporizer like no other. AtmosRx® heats and vaporizes your herbs to achieve ultimate results. Easy and discreet to use, AtmosRx® works in all conditions including a windy day on your boat, a rainy afternoon at the park, on top of a mountain, or just sitting on your couch! After a short two hour charge, your device is ready to use. Simply fill your device's ceramic heating chamber with your herbs, press down on the power button, and a short inhale is all you need to start enjoying your AtmosRx® vaporizer.

ACCESSORIES OVERVIEW...

1. Cleaning Brush Tool
2. Packing Tool

1

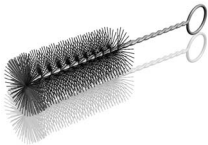

2




3

OVERVIEW...

1. Rubber Mouthpiece
2. Ceramic Filter
3. Mesh Filter
4. Spring
5. Chamber Connector
6. Glass Filter
7. Ceramic heating chamber

OVERVIEW (CONT)...

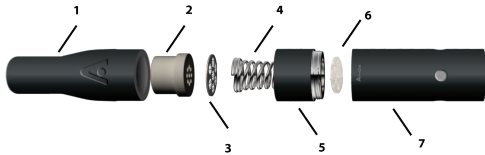

Not Included

PREPARING...

Charge your AtmosRx® battery for 2 hours, your USB charger light will be red while charging and will turn green once the battery is full.

To load your AtmosRx® vaporizer:

1. Remove the chamber connector from the ceramic heating chamber.
2. Fill the ceramic heating chamber with your herbs. Use the packing tool to gently pack the chamber with your herbs (do not overpack).
3. Screw the chamber connector back into the ceramic heating chamber.

With your AtmosRx® connected you are now ready to vape!

ACTIVATING WITHOUT GLASS FILTER

- Place herbs inside Heating Chamber.
- Press power button for approximately 2 seconds. (activate heating element)
- Inhale slowly while continuing to press the power button-Enjoy!

USING GLASS FILTER (SOLD SEPARATELY)

(USE FOR MORE VAPORIZATION)

- Remove Spring from Chamber Connector.
- Insert glass filter inside Heating Chamber.
- Place herbs above glass filter. Use packing tool to pack it correctly.
- Press power button for approximately 9 seconds twice. (activate heating element)
- Release power button each time for 3 seconds. (reset)
- Press power button - inhale slowly - Enjoy!

CAUTION: Do not touch glass filter immediately after use. **VERY HOT.**

CLEANING AND MAINTAINING...

To clean the Ceramic Heating Chamber:

1. Wait approximately one minute before removing glass filter (extremely hot).
2. Disconnect heating chamber from battery.
3. Use the brush tool to gently clean the walls of the heating chamber.
4. Do NOT push all the way down and touch the heating element.

When using the AtmosRx[®] vaporizer for an extended amount of time, the filter may become clogged and dirty resulting in a difficult draw or a lower amount of vapor being released through the mouthpiece.

CLEANING AND MAINTAINING (CONT)...

To clean the Ceramic Filter:

1. Use a paper clip or a pin and insert within the holes.
2. Push all the way through to ensure clear airway. Wipe clean with a cloth.

To clean the Rubber Mouthpiece:

1. Use a cotton swab and wipe the inner part of the rubber mouthpiece.
2. Wipe the mouthpiece with a damp paper towel.

REMOVING SPRING AND FILTER...

1. Remove the mouthpiece from the chamber connector.
2. Unscrew the chamber connector from the ceramic heating chamber.
3. Turn the chamber connector upside down and the mesh filter should fall out easily. Use the spoon end of the packing tool if necessary.
4. To remove the spring from the chamber connector hold the spring at the highest part possible. Twist counterclockwise and quickly pull it through the smaller opening of the chamber connector.
5. The spring is very delicate. If it is stretched from original size, it should be replaced.
6. AtmosRx® is designed to work without the spring as well. The packing tool can be used to pack herbs as needed.

REPLACING THE SPRING AND FILTER...

1. Place the spring, smaller end first, into the chamber connector. Gently pull through the other side until its secure in its place.
2. Place the mesh filter inside the chamber.
3. Use the packing tool to press the filter in firmly and evenly.
4. Screw the chamber connector to the ceramic heating chamber.
5. Insert the ceramic filter to the mouthpiece.
6. Connect the mouthpiece to the chamber connector. Make sure the mouthpiece is pushed all the way into the chamber connector. If the mouthpiece does not go all the way down, then the mesh filter is not laying flat and needs to be readjusted.

TIPS...

- For best results do not pack the ceramic heating chamber too tightly with your herbs. This will ensure easy air flow passage for even heating.
- The drier the herbs, the better the results.
- Please remember to hold the power button down for at least two seconds before inhaling to activate the heating element.
- Between uses, wait three seconds before reactivating the device.
- In the event that vapor is not being released, use the packing tool to gently rotate the herbs within the chamber.
- For best results, break the herbs up by hand or grind them. Be sure to remove all stems and/or seeds before filling the heating chamber.

WARNINGS...

- Do NOT fill the heating chamber with any stems, seeds or liquid. Doing so will cause damage to the AtmosRx[®] vaporizer and void the warranty.
- Do NOT touch the metal spring for at least one minute after use as it will be hot.
- Do NOT touch the glass filter for at least one minute after use as it will be hot.
- Do NOT put your AtmosRx[®] vaporizer in water or any other liquid.
- Do NOT put any objects into the opening of your device.

COMMONLY USED HERBS...

- Passion Flower
- Eucalyptus
- Hops
- Peppermint
- Lavender
- Damiana
- Lemon Balm
- Clary Sage
- Thyme
- Rosemary

WARRANTY...

To activate the Replacement Warranty Program, please register online at www.Atmosrx.com.

The customer shall notify the company in writing of any defects in the product. No package will be accepted without a RMA#.

Atmos Nation has sole discretion under the foregoing warranty to repair or replace any defective unit as deemed fit.

Repair of this device should only be done by Atmos Nation.

Failure to comply with any of the warranty guidelines will release Atmos Nation from any and all liability.

Only use original accessories and spare parts made by Atmos Nation for the AtmosRx® vaporizer.

THANK YOU FOR PURCHASING
THE ATMOSRX®
PORTABLE VAPORIZER

PLEASE CONTACT US ANYTIME AT
INFO@ATMOSRX.COM

